



Problem Solving Chart

The polisher will work perfectly if the following statements are true;

1. The cutlery entering the polisher is clean and wet
2. The cutlery was not allowed to dry prior to polishing, once dry, soaking in water will not remove the watermarks. If this happens the cutlery must be re-washed (only detergent will remove watermarks).

Please follow this chart; any problems call us on 08452571969

