



The Cutlery
Polisher
Company Ltd

The Cutlery Polisher

- Turn machine on 25 minutes before you need it. (To heat up)
- Take your washed, wet cutlery and place into the polisher. **Do not let the cutlery dry before putting it into the polisher, if it dries it must be washed again, re-soaking does not work!**

(If you cannot work this way, or there is a delay between washing and polishing, drop the freshly washed, wet cutlery into a bucket of water and place into the polisher when you are ready.)

- Only put in between 8-10 pieces at a time, place another 8-10 pieces once these have disappeared into the grain.
- Lift the lid up and clean inside once per day.
- Leave running for 25 minutes at the end of the day.



NOTE; the polishing grain must be changed every 4-8 weeks dependent on use to maintain the correct operation of the polisher and to comply with the warranty conditions.

Contact us via the following;

www.thecutlerypolisher.co.uk info@thecutlerypolisher.co.uk

0845 257 1969