



The Cutlery
Polisher
Company Ltd

The Glass Polisher

Seven simple steps to pristine glassware;

1. Switch the machine on and allow to heat up for 5 minutes.
2. Make sure that the glasses to be polished have been washed correctly and are still damp.
3. Hold the glass by the base and gently lower onto the centre brush this allows the outside and inside to be polished before the water dries.
4. Then hold the glass by the top of the stem and polish the base on the outside brushes.
5. The glass is now ready to place on the table.
6. At the end of use, leave the machine on to allow the brushes to dry.
7. Clean the machine once per week, please turnover for further instruction.



Contact us via the following;

www.thecutlerypolisher.co.uk info@thecutlerypolisher.co.uk

0845 257 1969



The Glass Polisher



Problems;

1. “The glasses are polished but they have been left smeary”
2. “There is still lipstick on the glass”
3. “The glasses are still wet after polishing”

Solutions;

1. The glass washer is not cleaning correctly, or, the brushes need cleaning.
2. The polisher polishes, it cannot clean, lipstick should have been removed during cleaning.
3. Allow the brushes to dry completely by leaving on for ten minutes.

Cleaning of Brushes;

At least weekly, place the brushes into a pillow case and wash in a washing machine at below 50 degrees. (A hotter wash than this will result in the bristles falling out.) Allow to dry naturally, and then finish off with ten minutes on the polisher.

The filter under the machine needs to be cleaned monthly for consistent results.

Contact us via the following;

www.thecutlerypolisher.co.uk info@thecutlerypolisher.co.uk

0845 257 1969